

CLASSIC - TOUCH FREE SOAP DISPENSER

DECK MOUNTED TOUCH FREE ELECTRONIC SOAP DISPENSER FOR NON-PROPRIETARY SOAP

SPECIFICATIONS

Touch free deck mounted electronic soap dispenser, activated by infrared sensor. Complete with anti-rotation pin. Chrome plated body, other finishes available. The version for batteries features a low battery indicator. Includes a 1 liter foam soap bottle and a bottle support. The following functions can be performed by using Stern remote control: soap quantity selection, refill the soap tank, temporary off, coming back to factory settings.

OPERATION

Touch free electronic soap dispenser .The dispenser is activated automatically when the user brings his hands within the sensor range, and stops when the user removes his hands.

APPLICATION

Closing automatically without dripping, the Classic touch free soap dispenser helps to ensure that the bathroom will stay organized and neat. Combined with Classic touch free electronic faucet, it creates a germ free and automated environment.

PRODUCT AT A GLANCE


Installation	Lavatory mounted. Regular installation with the bottle below the lavatory or remote installation with bottle support kit to be secured to the wall.
Power Supply Options	<ul style="list-style-type: none"> Battery Box for 6D batteries. 12V Transformer
Soap	1 Liter soap bottle. This soap dispenser includes a peristaltic pump that allows to be used with non-proprietary soap for maximum savings.
Soap Dosage	Factory setting of 1.2 to 1.6 cc depending on the selected soap. The soap quantity can be changed using the soap dispenser remote control.
Refill	Easy to use refill button in order the soap will start to come out of the soap dispenser spout. This function can also be performed with the remote control.

ORDERING INFORMATION

MODEL	POWER	CODE
Classic Soap Dispenser E	12V transformer	292410
Classic Soap Dispenser B	Battery Box for 6D batteries	292400
Classic Soap Dispenser E 6-pack	12V transformer	292411
Classic Soap Dispenser B 6-pack	Battery Box for 6D batteries	292401
Classic Soap Dispenser 1.6 E	12V transformer	292416

OPTIONS

OPTION	CODE
6L Tank Kit (for individual soap dispenser)	07220097
Remote control for adjusting settings	07100008

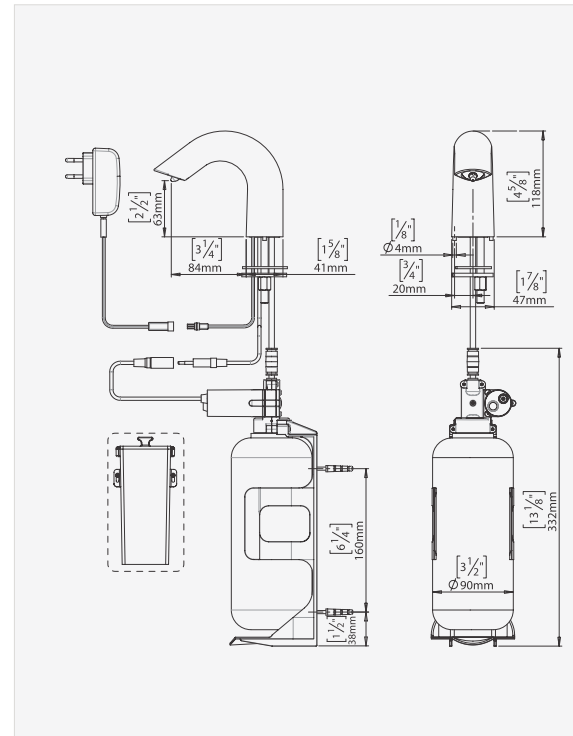

MAXIMUM SAVINGS



GERM FREE



PRECISE AMOUNT



CHANGE SETTINGS



SOAP AND WATER



CLOGGING FREE



EASY TO INSTALL

777 Passaic Avenue
Clifton NJ, 07012
USA: sternusa@sternfaucets.com
International: info@sternfaucets.com
Toll Free: 1-800-4364410
www.sternfaucets.com