

ELITE FOAM DISPENSER

TOUCH-FREE ELECTRONIC FOAM DISPENSER

SPECIFICATIONS

Touch-free electronic foam dispenser for deck-mounted installations. Activated by infrared sensor. For use with any non-proprietary soap. Chrome plated body, other finishes available. Includes a 1 liter soap bottle and bottle support. With a designated peristaltic pump that prevents clogging and back flow. Remote installation option: extension cable and longer piping. Adjustable settings by remote control: soap quantity, soap tank refill, temporary off and reset to factory settings.

activates when users place their hands within sensor range, providing a measured amount of soap (adjustable by remote control). If the users remove the hand before the full amount is dispensed, the soap dispenser immediately stops the soap flow.

APPLICATION

With the dripless automatic shutoff, this foam dispenser helps washroom organization and cleanliness. Combined with the touch-free electronic faucet, it creates a germ-free automated environment. Ideal for stadiums, train and bus stations and highway rest stops.

OPERATION

Touch-free electronic foam dispenser operated by infrared sensor. The foam dispenser automatically

PRODUCT AT A GLANCE


Installation	Deck-mounted
Power Supply	12V transformer
Soap	1 Liter soap bottle Peristaltic pump enables the use of any kind of liquid soap, detergent or antibacterial gel
Soap Viscosity	Up to 100 cPs
Refill	Soap priming operated by remote control or by easy-to-use manual refill button

ORDERING INFORMATION

MODEL	CODE	POWER
ELITE FOAM E	236120	12V transformer

OPTIONS

OPTION	CODE
Remote control	07100009
6-pack: 6 soap dispensers and a remote control	236121
Multifeed system	Upon request

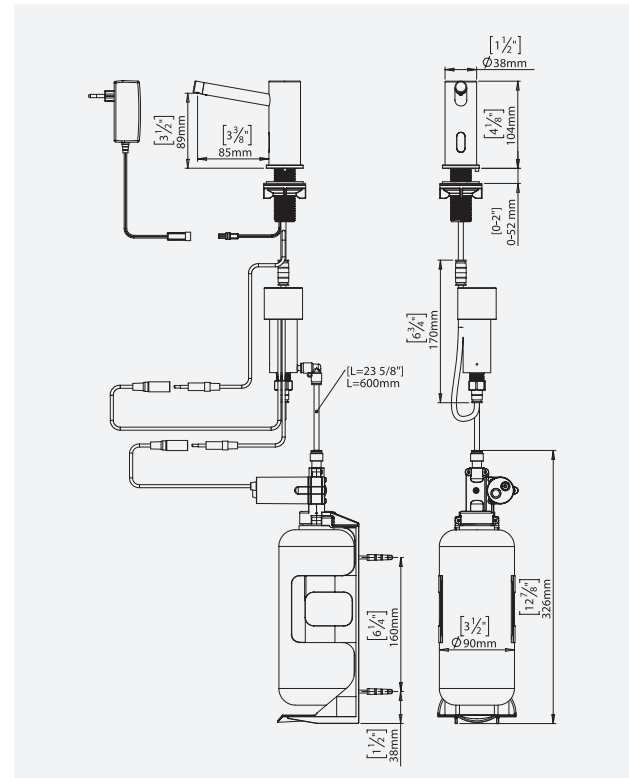

ADVANTAGES



LEED RATING



SOAP AND WATER



GERM FREE



CHANGE SETTINGS



EASY TO INSTALL



CLOGGING FREE



ADA DESIGNED

APPROVALS



777 Passaic Avenue
Clifton NJ, 07012
USA: sternusa@sternfaucets.com
International: info@sternfaucets.com
Toll Free: 1-800-4364410

www.sternfaucets.com