

EXTREME CS AISI316 TOUCH-FREE WALL MOUNTED FAUCET

SPECIFICATIONS

Touch-free wall-mounted electronic faucet. For cold or premixed water. AISI316 body. Activated by concealed sensor built into the spout. Filter included. Sensor includes a low battery indicator. Adjustable settings by remote control: sensor range, security time, delay in, delay out, on-off and reset to factory settings.

OPERATION

Touch-free electronic faucet. The faucet is automatically activated when users place their hands in the sensor range and stops when the users remove their hands.


APPLICATION

Combining an elegant design with vandal-resistant features. Easy installation. Long lasting even in the harshest installation sites. Helps washrooms stay clean and saves water. Prevents cross contamination. Ideal for offices, hotels and restaurants. Paired with Extreme CS AISI316 touch free soap dispenser, it creates a germ-free and automated environment.

PRODUCT AT A GLANCE

Installation	Duct Concealed
Power Supply Options	<ul style="list-style-type: none"> •IP67 Dual power input box with a 9V battery • 9V Transformer
Operating pressure	0.5 - 8.0 BAR (7 - 116 PSI). With a pressure over 8 bar, use a pressure reducing valve.
Water supply	Cold or premixed water
Water Saving options	4 LPM / 1.0 GPM - PCA spray
Water temperature	70°C Maximum
Security Time	Auto shutoff after 90 seconds. adjustable by remote control

FLOW RATE vs PRESSURE

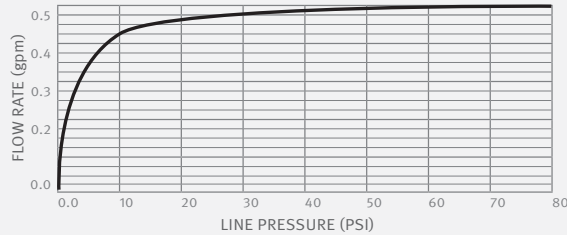


This graph applies to 0.5 GPM option only.

OPTIONS

OPTION	CODE
Remote Control	07100005
Matching battery-powered soap dispenser	237891
Matching transformer-powered soap dispenser combination	237890

ORDERING INFORMATION

MODEL	CODE	POWER
Extreme CS AISI316 E	237800 - 316	9V Transformer
Extreme CS AISI316 B	237801 - 316	IP67 Dual power input box with a 9V battery

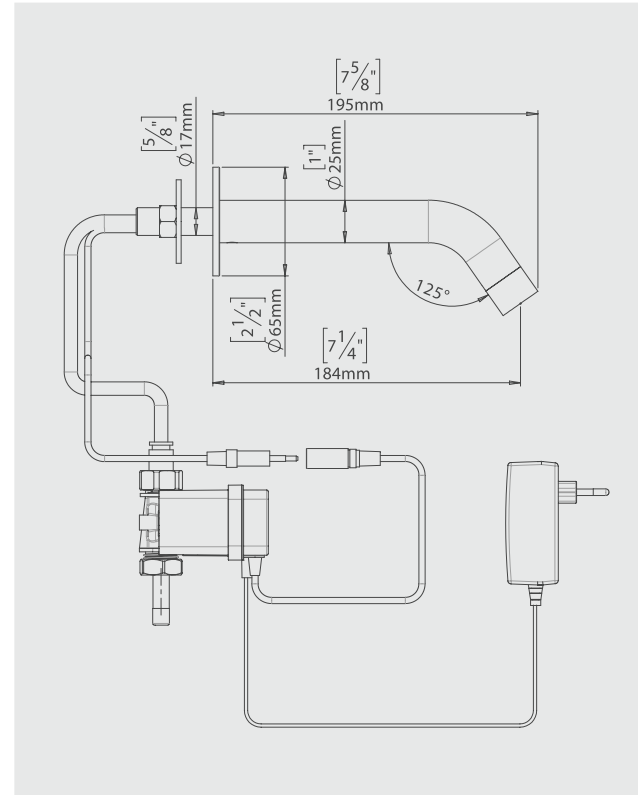

ADVANTAGES



LEED RATING



OPTIONAL HYGIENE FLUSH



SOAP AND WATER



GERM FREE



ADJUSTABLE SETTINGS



EASY TO INSTALL

777 Passaic Avenue
Clifton NJ, 07012
USA: sternusa@sternfaucets.com
International: info@sternfaucets.com
Toll Free: 1-800-4364410
www.sternfaucets.com