

# EXTREME CS DP TOUCH-FREE WALL MOUNTED FAUCET

## SPECIFICATIONS

Touch-free wall-mounted electronic faucet. For cold or premixed water. For concealed installation in concrete or brick walls and installations with no back access. Powered by IP67 dual power input box that allows the faucet to be used with 9V battery or 9V transformer. Can be powered by a 9V transformer and an integrated back up system to be used with 9V lithium battery enabling the faucet to be used normally in case of power failure. Chrome plated body, other finishes available. Activated by concealed sensor built into the spout. Filter included. Sensor includes a low battery indicator. Adjustable settings by remote control: sensor range, security time, delay in, delay out, on-off and reset to factory settings.

## OPERATION

Touch-free dual-powered electronic faucet. The faucet is automatically activated when users place their hands in the sensor range and stops when the users remove their hands.


## APPLICATION

Combining an elegant design with vandal-resistant features. Concealed installation in brick walls. Helps washrooms stay clean and saves water. Prevents cross contamination. Ideal for offices, hotels and restaurants. Paired with Extreme CS SD 2030 touch free soap dispenser, it creates a germ-free and automated environment.

## PRODUCT AT A GLANCE

Installation	Concealed installation in brick walls
Power Supply Options	<ul style="list-style-type: none"> <li>• 9V battery</li> <li>• 9V Transformer</li> </ul>
Operating pressure	0.5 - 8.0 BAR (7 - 116 PSI). With a pressure over 8 bar, use a pressure reducing valve.
Water supply	Cold or premixed water
Water Saving options	4 LPM / 1.0 GPM - PCA spray
Water temperature	70°C Maximum
Security Time	Auto shutoff after 90 seconds. adjustable by remote control

FLOW RATE vs PRESSURE

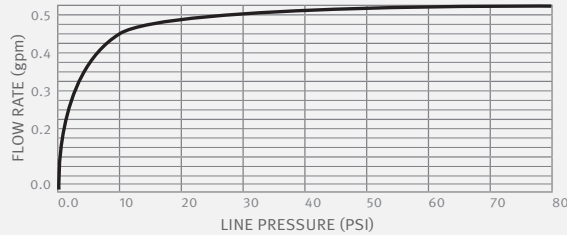


This graph applies to 0.5 GPM option only.

## OPTIONS

OPTION	CODE
Remote Control	07100005
Matching transformer-powered soap dispenser combination	237892

## ORDERING INFORMATION

MODEL	CODE	POWER
EXTREME CS DP E	237803	9V Transformer
EXTREME CS DP B	237802	9V battery

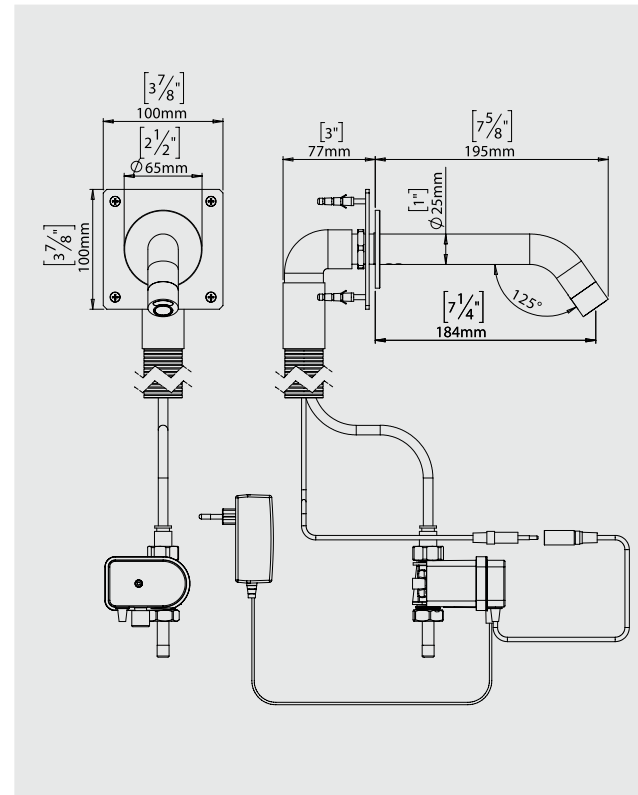

## ADVANTAGES



LEED RATING



OPTIONAL HYGIENE FLUSH



SOAP AND WATER



GERM FREE



ADJUSTABLE SETTINGS



EASY TO INSTALL

777 Passaic Avenue  
Clifton NJ, 07012  
USA: sternusa@sternfaucets.com  
International: info@sternfaucets.com  
Toll Free: 1-800-4364410  
www.sternfaucets.com